




MANUAL - Portable Floor Screen

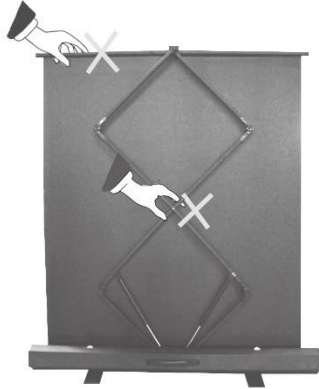


- CAUTION Cont.:**
- To ensure a flat and even surface on the fabric when the screen is extended, please do not touch the gap between the top crosswise mechanism and the yellow label part.
 - To avoid folding the fabric and causing creases to the screen, please extend and retract the screen slowly, applying only minimal pressure.
 - In case of cleaning of the fabric, use a soft, damp cloth to clean any spots / blemishes on the fabric's surface. Gently wipe the screen, applying minimal pressure to prevent tear or damage.
 - Be sure to lock the screen securely in its casing after use, to protect the screen.

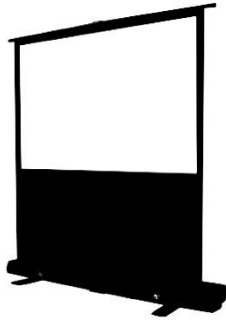

- Operating Instructions:**
- Rotate the left & right support plate (Stand holder) outwards.
 - Open the lock by pressing the unlock button and open the top of the screen's casing.

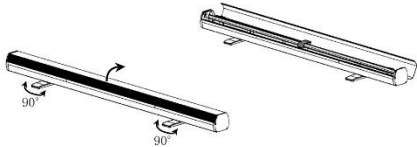


- Pull the handle in the middle of the screen, indicated with the yellow label. Pull upwards until the maximum height is reached.

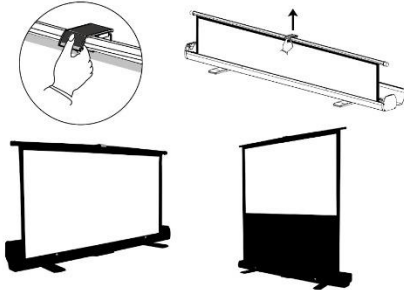


1

- When retracting the screen, slowly pull the handle indicated with the yellow label downwards, until the screen has completely retracted back into the casing.

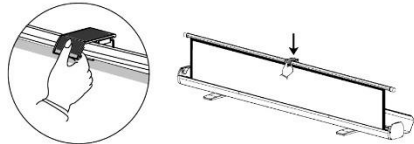

- Close the casing and rotate the left & right support plate (Stand holder) inwards and align them with the casing.

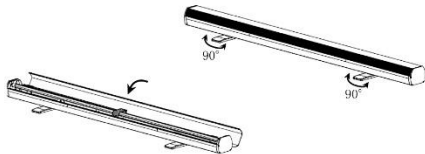


- CAUTION:**
- Keep the screen in a Wind free environment.
 - When extending or retracting the screen, remember to only use the handle indicated with the yellow label.


2

MANUAL - Tripod Screen


1. Open the tripod fully, by pushing down on the center portion of the tripod, until the three feet of the tripod are fully spread out.

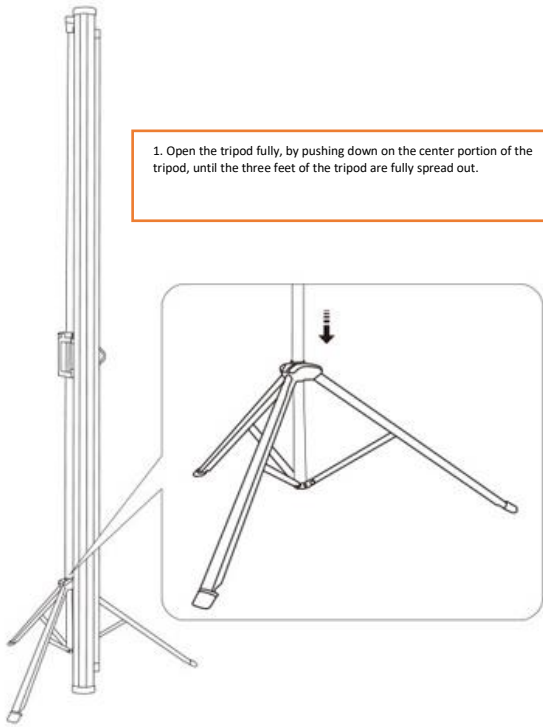

2. Turn the housing case 90 degrees and pull the hatch upwards and attach the hatch to the top of the Tripod pole. (Follow the steps: A,B,C.)

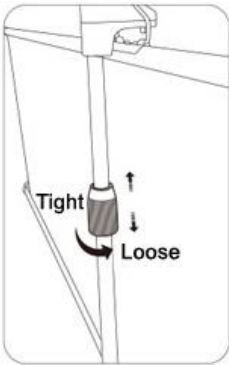


3. Adjust the tightening lock of the Tripod pole, to change the desired height of the of the screen.

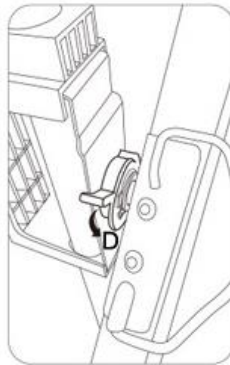


5. With the dial knob on the handle hatch, it is possible to remove the entire housing case of the screen. This is done by turning the dial knob downwards as shown on the picture.


4. By opening or closing the handle hatch, it is possible to adjust the lowest part of the screen to the desired height.

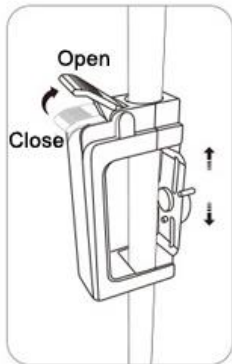

6. After turning the dial knob, the Housing case is then removed as shown.

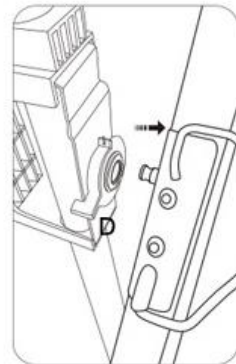


MANUAL - Portabelt Gulvlerret

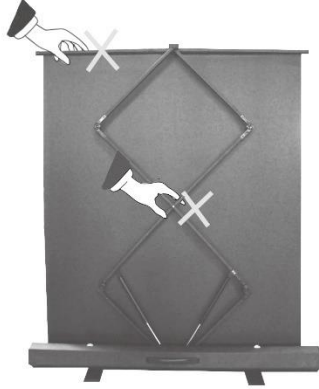


Advarsel Forts.:

3. For å sikre en flat og jevn overflate på lerretet når skjermen er satt opp, må du ikke berøre gapet mellom den øvre kryssmekanismen og den gule etikettdelen.
4. For å unngå å brette stoffet og forårsake rynker på lerretsduken, må du trekke opp og senke lerretet sakte, med minimalt trykk.
5. Ved rengjøring av lerretsduken, bruk en myk, fuktig klut for å fjerne eventuelle flekker/flekker på stoffets overflate. Tørk forsiktig av lerretsduken, og bruk minimalt med trykk for å forhindre rift eller skade.
6. Pass på å låse skjermen godt i kassetten etter bruk, for å beskytte skjermen.

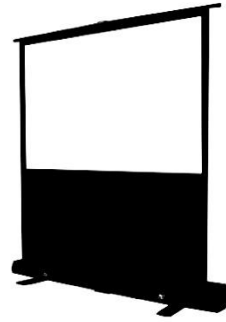


Bruksanvisning:

1. Roter venstre og høyre støtteplate (stativholder) utover.
2. Åpne låsen ved å trykke på opplåsningsknappen og åpne toppen av lerretsakassetten

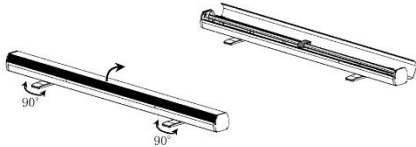


3. Trekk i håndtaket på midten av skjermen, indikert med gul etikett. Trekk oppover til maksimal høyde er nådd.

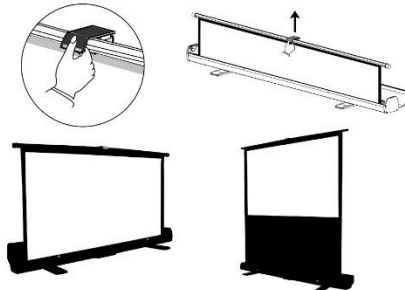


1

4. Når du senke lerretsduken, dra sakte håndtaket som er angitt med den gule etiketten nedover, til skjermen har trukket seg helt tilbake inn i kassetten

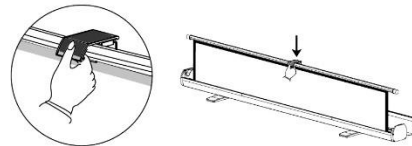

5. Lukk dekselet og roter venstre og høyre støtteplate (stativholder) innover slik at de flukter med dekselet.

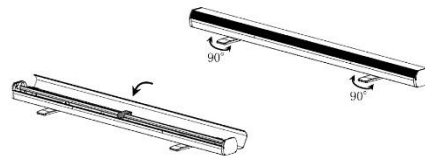


CAUTION:

1. Keep the screen in a Wind free environment.
2. When extending or retracting the screen, remember to only use the handle indicated with the yellow label.

2



MANUAL - Stativlerret

1. Åpne stativet helt ved å trykke ned den midtre delen av stativet til de tre føttene på stativet er helt spredt ut.

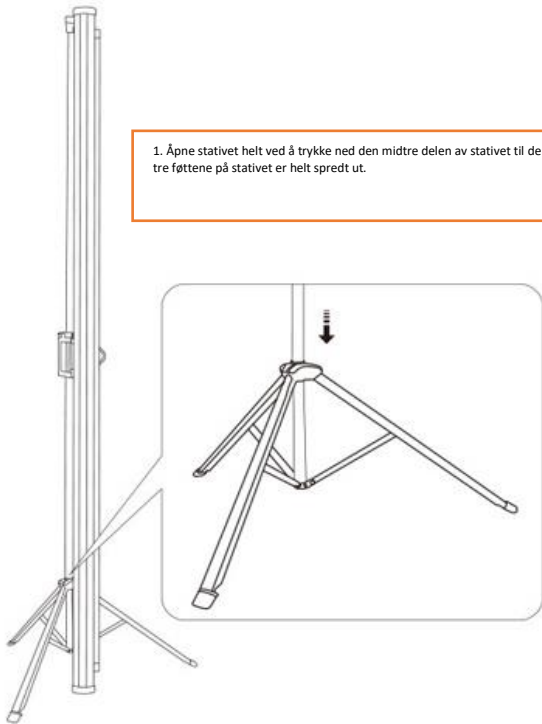


2. Snu lerretskassetten 90 grader og trekk metallhempen oppover og fest den i kroken på toppen av stativstangen.

(Følg trinnene: A,B,C.)

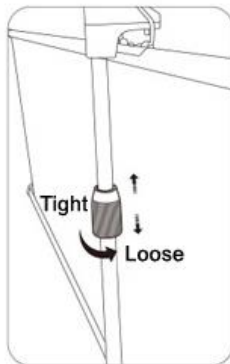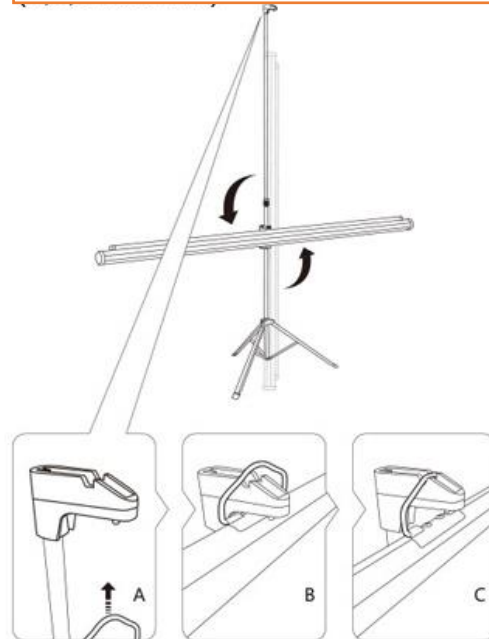


3. Juster strammelåsen til stativstangen for å endre ønsket høyde på lerretsduken.

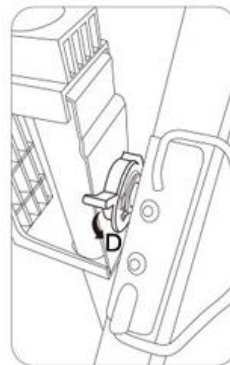

5. Med skiveknappen bak metallhempen er det mulig å fjerne hele lerretskassetten. Dette gjøres ved å dreie skiveknappen nedover som vist på bildet.

4. Ved å åpne eller lukke håndtakslemmen er det mulig å justere den nederste delen av skjermen til ønsket høyde..

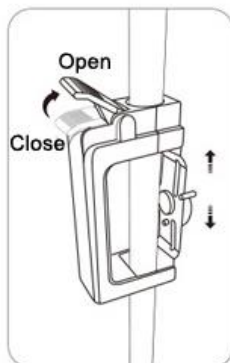

6. Etter å ha dreid på skiveknappen fjernes lerretskassetten som vist.

