



**MANUAL - Portable Floor Screen**

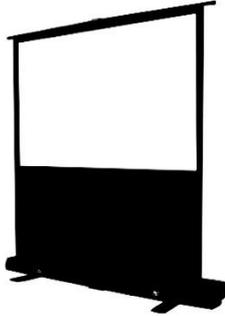


- CAUTION Cont.:**
3. To ensure a flat and even surface on the fabric when the screen is extended, please do not touch the gap between the top crosswise mechanism and the yellow label part.
  4. To avoid folding the fabric and causing creases to the screen, please extend and retract the screen slowly, applying only minimal pressure.
  5. In case of cleaning of the fabric, use a soft, damp cloth to clean any spots / blemishes on the fabric's surface. Gently wipe the screen, applying minimal pressure to prevent tear or damage.
  6. Be sure to lock the screen securely in its casing after use, to protect the screen.


- Operating Instructions:**
1. Rotate the left & right support plate (Stand holder) outwards.
  2. Open the lock by pressing the unlock button and open the top of the screen's casing.

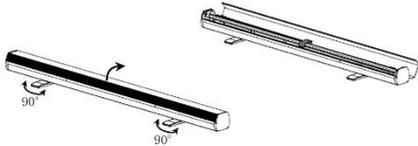


3. Pull the handle in the middle of the screen, indicated with the yellow label. Pull upwards until the maximum height is reached.

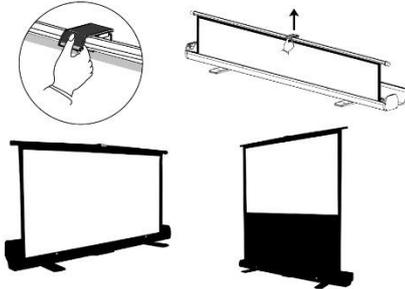

4. When retracting the screen, slowly pull the handle indicated with the yellow label downwards, until the screen has completely retracted back into the casing.

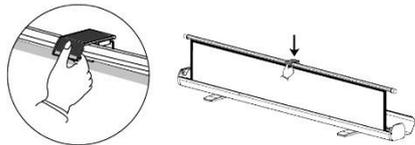


5. Close the casing and rotate the left & right support plate (Stand holder) inwards and align them with the casing.

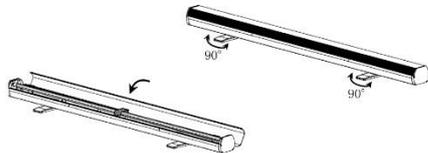


- CAUTION:**
1. Keep the screen in a Wind free environment.
  2. When extending or retracting the screen, remember to only use the handle indicated with the yellow label.

**MANUAL - Tripod Screen**

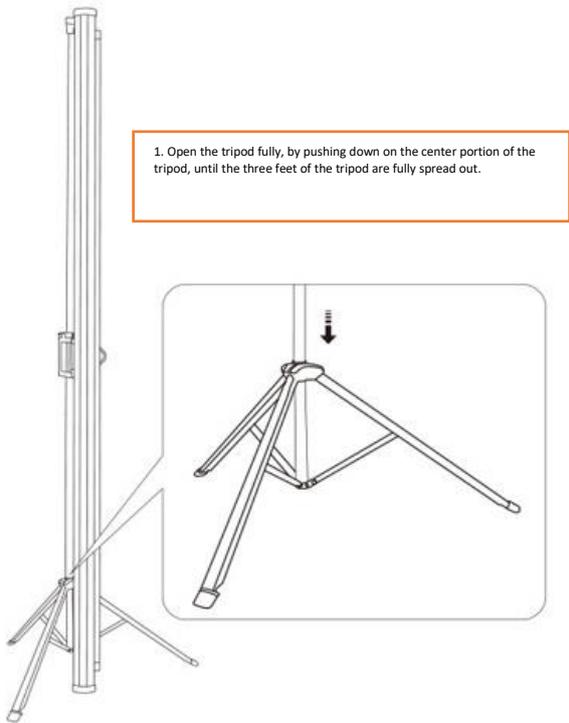


1. Open the tripod fully, by pushing down on the center portion of the tripod, until the three feet of the tripod are fully spread out.

2. Turn the housing case 90 degrees and pull the hatch upwards and attach the hatch to the top of the Tripod pole. (Follow the steps: A,B,C.)

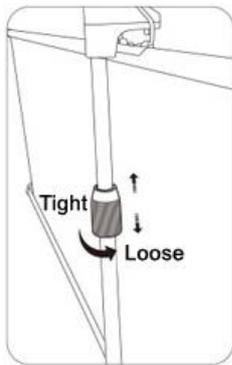


3. Adjust the tightening lock of the Tripod pole, to change the desired height of the of the screen.

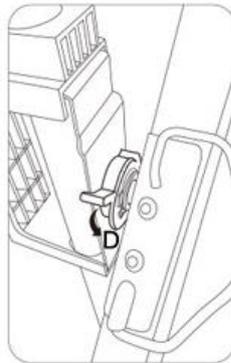

5. With the dial knob on the handle hatch, it is possible to remove the entire housing case of the screen. This is done by turning the dial knob downwards as shown on the picture.

4. By opening or closing the handle hatch, it is possible to adjust the lowest part of the screen to the desired height.

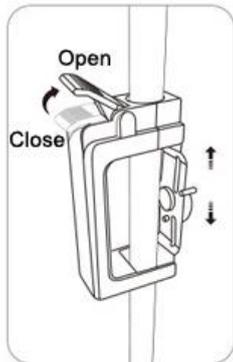

6. After turning the dial knob, the Housing case is then removed as shown.

